Model: GN-711W

GiiNii 7” Wedge Digital Picture Frame

User Guide

Edition V1.0
www.giinii.com
© 2008 GiiNii International

Table of Content

CHAPTER 1: HOW TO GET STARTED! 5

Connecting to Power and Turn on to play 5
Functional Buttons 5
LED Indicator 6
On Screen Navigation 6
Inserting a memory card 7

CHAPTER 2: MENU OPTIONS 8

CHAPTER 2: MENU OPTIONS 8

1 Calendar 8
2 Clock 9
3 Photo 10
4 Music 11
5 Movie 12
6 Setting 13

CHAPTER 3: FREQUENTLY ASKED QUESTIONS 16

CHAPTER 4: OTHER FEATURES 17

***CONNECT TO PC* 17**

Product Specification 19

CHAPTER 5: REGULATORY ISSUES & WARRANTY 20

Regulation & Compliance 20
GiiNii 90-Day Limited Warranty 20
Replacement Parts 23

Dear Customer:

Thank you for bringing our GiiNii digital picture frame into your home. Now you can view your growing digital picture library in stunning clarity and share great memories with friends and family.

To get the most out of your new GiiNii product, please read through this entire Owner's Manual before using. Chapter 1: How to Get Started. Chapter 2: Menu Options. Chapter 3: Frequently Asked Questions.

Also, please check out our online video tutorials on **HOW TO START** and **HOW TO PROGRAM** your new picture frame at www.giinii.com under PRODUCTS and scroll down to TUTORIALS.

For 24/7 GiiNii Customer Service, please call: 1-866-909-3550.

Sincerely,
The GiiNii Team

Key Features:

- 7’’ LCD Wide Screen with 800*480 resolution
- EnerGiiNii™ provides three intelligent ways of power consumption management. When EnerGiiNii On is enabled, this unit will automatically operate at low power consumption during nighttime (21:00PM~7:00AM), and will automatically resume normal during daytime (7:00AM ~21:00PM)
- Built-in 512MB memory to store your pictures
- Supports the most popular memory cards: SD, MMC, XD and MS
- Connects to your PC picture library using the mini-USB port
- Plays three types of photos: JPEG, TIF, GIF
- Multi-media capabilities to play music and videos (MP3, WMA, Motion JPEG/.avi, .mov)
- Built-in speaker
- Thumbnail view and multi-slideshow transition effect

What’s in the Box

Included in your new picture digital picture box:

1. GiiNii 7” Wedge Digital Picture Frame with 3 pre-installed pictures
2. One Power Adapter (5V / 2A)
3. User Guide and Quick Start Guide
4. Registration Card
5. GiiNii website introduction card

Chapter 1: How to Get Started!

Connecting to Power and Turn on to play

The power connector is on the lower left side of the GiiNii Digital Picture Frame. Insert the small jack into the device, then plug the AC cord into an electrical outlet. In some cases, you may need to slip on the double-plug attachment on to the adapter before plugging into the wall socket.

Press **G** button to turn on the picture frame, and play your favorite Photo / Music / Movie freely.

Functional Buttons

The buttons used for operating your device are located on the sides. The buttons can be used to drive all functions of the on-screen menu.

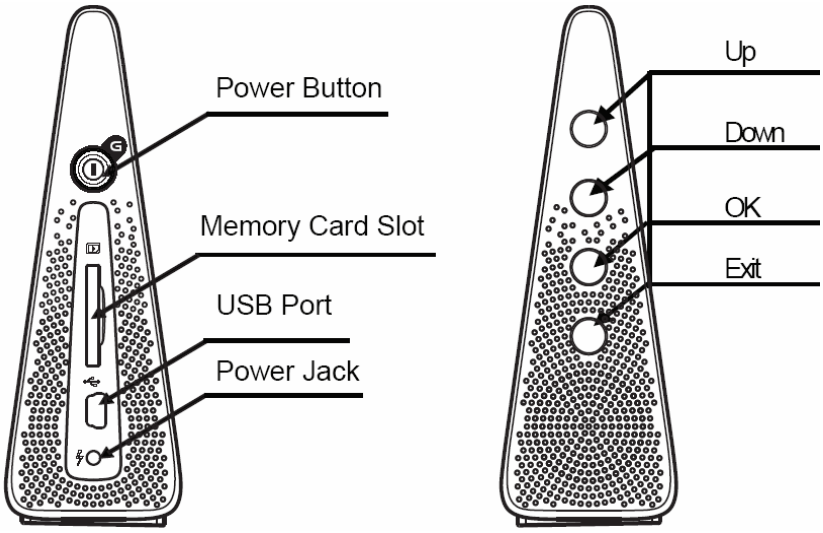

Buttons	Description
G	1. Power button: Hold and press to Power on/off 2. Slideshow button: Press to Slideshow in any mode
Up	Items move up and move right
Down	Items move down or move left
OK	1. Confirm selection 2. Play or Pause in Music and Movie mode 3. Press and hold to fast forward in music and movie mode
Exit	Go back to previous menu

LED Indicator

LED Color	Status Description
Green	EnerGiiNii mode
Orange	Work normally
Red	Power off

On Screen Navigation

Another unique feature of the GiiNii digital picture frames is the “on screen navigation”. Menu options appear on the screen when you select any button on the

right side of the picture frame. Simply follow the on-screen icons to change any option you have selected.

Inserting a Memory Card

Your picture frame is equipped with **512MB internal memory** and **three pre-loaded photos**. The photos will automatically start playing when there is no memory card inserted or no supported files in internal memory.

To play your own content, insert a memory card containing photos, music, or movies into the card slot on the side of your picture frame.

Or, you can also transfer pictures, movies or music from PC to internal memory by using an USB cable(mini-B to standard A port). See Chapter 4 for details.

Below are the pre-installed photos that come with your GiiNii 7DS Wedge Digital Picture Frame.

Helpful Tips

- This device supports following memory cards: SD, MMC, MS and XD
- This picture frame supports MP3 and WMV music formats
- This picture frame supports AVI / MOV video format
- For further information on supported memory card types and file formats, please refer the Product Specifications.

Chapter 2: Menu Options

1 Calendar

- In this main menu, select **Calendar**, press **OK** to enter.
- Press **Up** or **Down** to view month. It will automatically circle from this month to next when you press and hold **Up** or **Down**.
- Press **OK** to view your selection in full screen.

- Use **Up** or **Down** to view from this month to next or previous. Pressing **OK** can bring you to current month.
- In current month, press **OK** to go back to **Calendar** menu.

2 Clock

- In main menu, select **Clock**, press **OK** to enter.

a. Clock Display:

- There are three different skins for clock display, use **Up** or **Down** to select, and press **OK** to display Clock in full screen.
- In full screen mode, press **Up** or **Down** to switch in different skins for clock display. Press **OK** to go back to **Clock** menu.

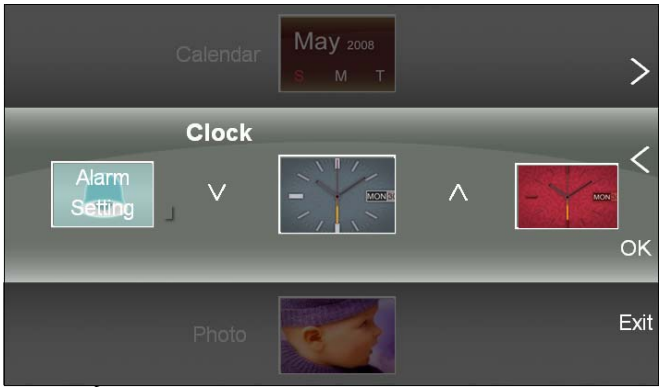

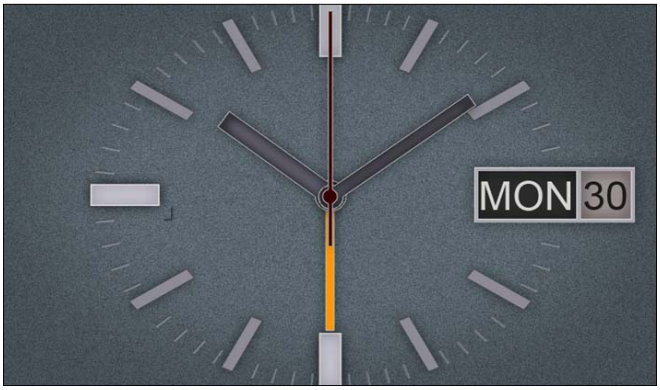

b. Alarm Setting

- There are four items for **Alarm Setting**: **AM/PM, Hour, Minute, On/Off**.
- Press **OK** to enter, and use **Up** or **Down** to process your favorite setting.

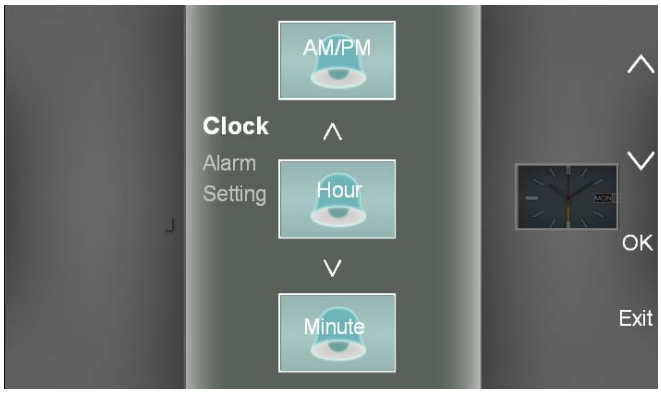

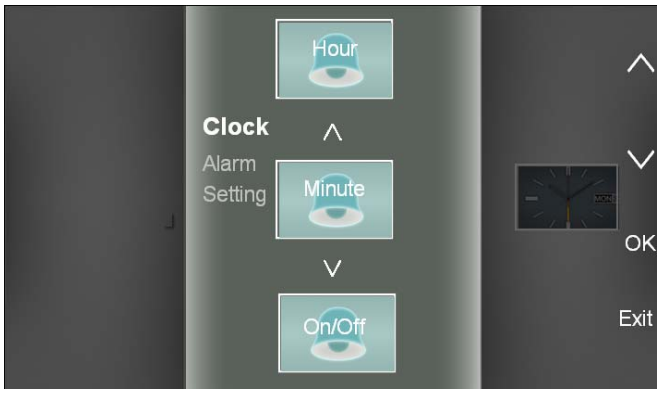

3 Photo

- In main menu, select **Photo**, press **OK** to enter.
- Press **Up** or **Down** to select a photo.
- Photos will automatically slide one by one when **Up** or **Down** is pressed and held.

- There are six items for you to edit photos: **Color effects, Contrast, Brightness, Delete, Rotate, Ratio**.

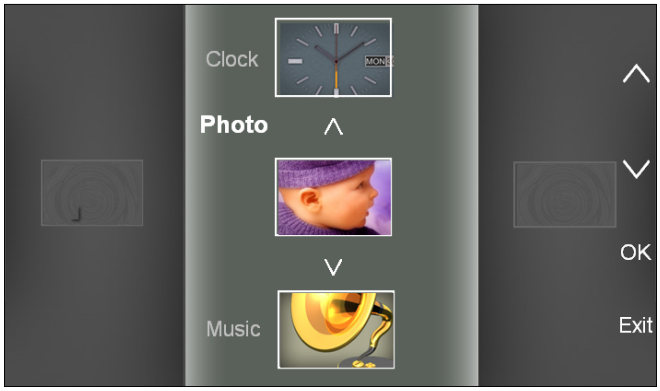

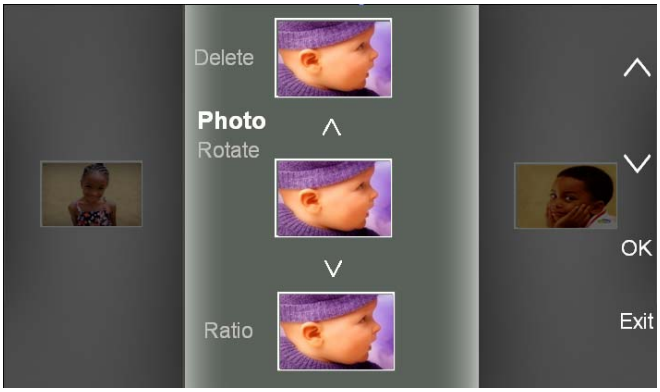

Color Effects: Normal, Blake and White, Sepia

Contrast: Contrast Low, Normal to High

Brightness: Darker, Normal, Brighter

Delete: Yes or No

Rotate: Rotation (None)， Rotation+90， Rotation+180, and Rotation-90

Ratio: Full screen and Actual size

- With **Up** or **Down** to select, **OK** to confirm, photos can easily edited to your satisfaction.

4 Music

- In main menu, select **Music**, press **OK** to enter.

- Press **Up** or **Down** to select a music.
- Music will automatically slide one by one when **Up** or **Down** is pressed and held.
- When music is selected and played by press **OK**, photos will slideshow accordingly. But only music can be operated during this mode. Press **Up** or **Down** to adjust volume, or press **OK** to pause.
- To fast forward 2X for music, press and hold **OK** for 2 seconds, press **OK** again to normal speed; To fast forward 4X for music, press and hold **OK** for over 2 seconds, press **OK** again to normal speed.
-

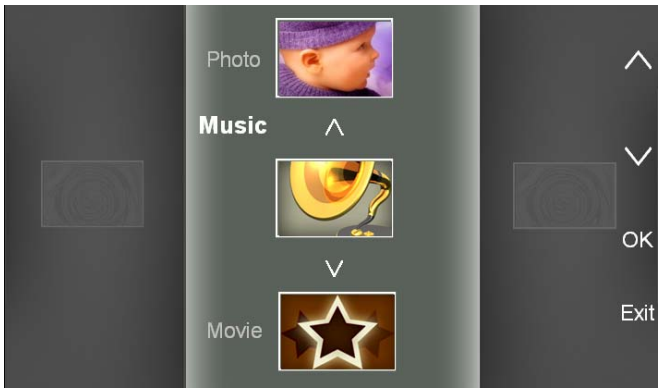

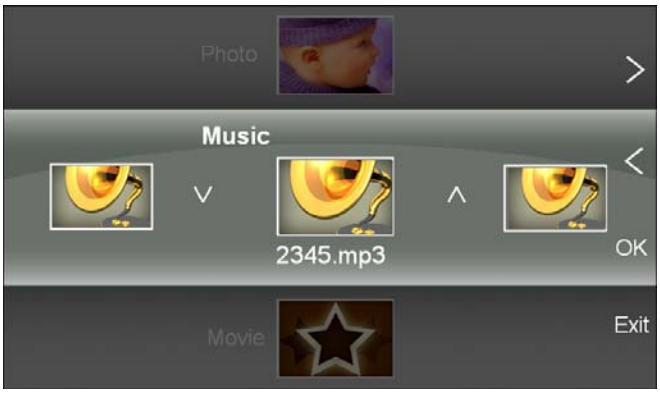

5 Movie

- In main menu, select **Movie**, press **OK** to enter.
- Press **Up** or **Down** to select a movie.
- Movie will automatically slide one by one when **Up** or **Down** is pressed and held.

- Press **OK**, play the selected movie. During movie play, you can press **Up** or **Down** to adjust volume, or press **OK** to pause.
- To fast forward 2X, press and hold **OK** for 2 seconds, press **OK** again to normal speed; To fast forward 4X, press and hold **OK** for over 2 seconds, press **OK** again to normal speed.

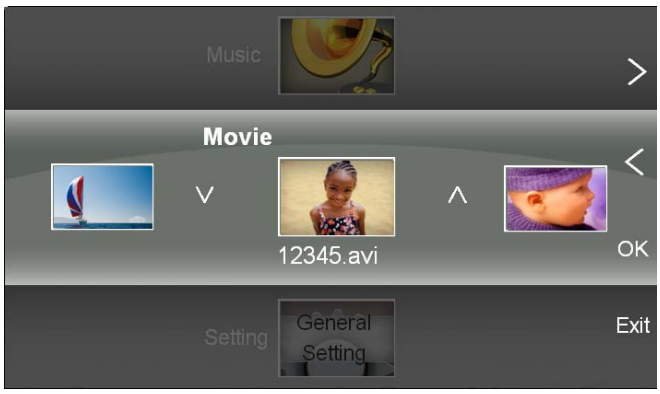

6 Setting

In this menu, you may access the following: General Setting, Date and Time Setting, Slideshow Setting and Information.

a. General Setting

There are four items for general setting: EnerGiiNii, Brightness, Language, and Reset.

EnerGiiNii: EnerGiiNii Off / EnerGiiNii On / EnerGiiNii Save 20% / EnerGiiNii Save 50%

When EnerGiiNii Off is enabled, this unit will operate at full power consumption full-time.

When EnerGiiNii On is enabled, this unit will automatically operate at low power consumption during nighttime (21:00PM~7:00AM), and will resume normal during daytime (7:00AM ~21:00PM);

When you select EnerGiiNii Save 20% or EnerGiiNii Save 50%, it will operate at that indicated power consumption rate full-time.

Language: English / Français / Nederlands / Español / Deutsch / Português / Italiano.

Brightness: Normal, Brighter, Darker

Reset: Reset Yes, or Reset No to default value

b. Date and Time

Use **Up** or **Down** to adjust date and time: AM/PM, Minute, Hour, Day, Month, Year

c. Slideshow Setting

In Slideshow setting, **Photo Mode, Interval and Transition** can be edited.

Photo Mode: Single, Repeat All or Random.

Interval: 3 Seconds, 10 Seconds, 30 Seconds, 1 Minute

Transition: Random, Insert, Shutter, 3D Circle, Fade, Reel, Block flip

Use **Up** or **Down** to choose your favorite selections.

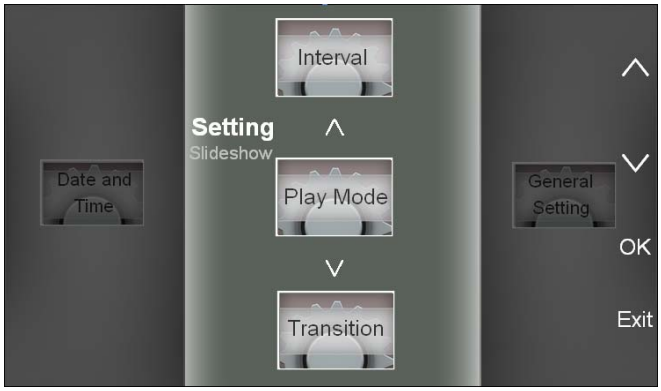

6.4 Information

You can view software version, memory card total, memory card free details in this menu.

Chapter 3: Frequently Asked Questions

This product has been set to its standard mode of operations before shipping. If you encounter any problems, please refer to the following **Q & A** for solutions.

Q: Device will not power on.

A: 1. Hold the power button for 2 seconds to power on.

2. If no response, make sure the power adapter is connected properly to the device and outlet.

3. If still no response, make sure local voltage supports your power adapter.

Q: Nothing happens when I insert a Memory Card.

A: 1. This device supports following memory cards: SD, MMC, MS, XD

2. Make sure Photo, Music and Movie file formats are in the supported file formats.

3. If item 1 & 2 are both supported, try to backup card files, format the card, copy the backup files to the memory card again to play.

Q: Music or Video will not play.

A: Music must be MP3 or WMA format. Video must be AVI / MOV Motion JPEG format.

Q: After connecting the Digital Picture Frame and PC with an USB cable, the operating system does not detect it.

A: 1. Use a qualified USB cable with logo on it.

2. The Digital Picture frame supports Windows2000/XP/Vista. Other operating systems may be supported but there is no guarantee and technical support available for such use.

3. If Digital picture frame is still not recognized by USB ports at the front side of the PC, try the USB ports at rear side (usually near the keyboard jack) of the PC.

Chapter 4: Other Features

Connect to PC

You can transfer photos, music, and movies to the photo digital frame from your PC. You may either use the internal memory or insert an external memory card. Turn off the device's power and connect the device to your PC using a mini-B to standard-A USB cable (not provided as an accessory). Turn the device back on and wait for the below figure to display on the device. Auto detection will occur for Windows 2000/ME/XP and MAC OS.

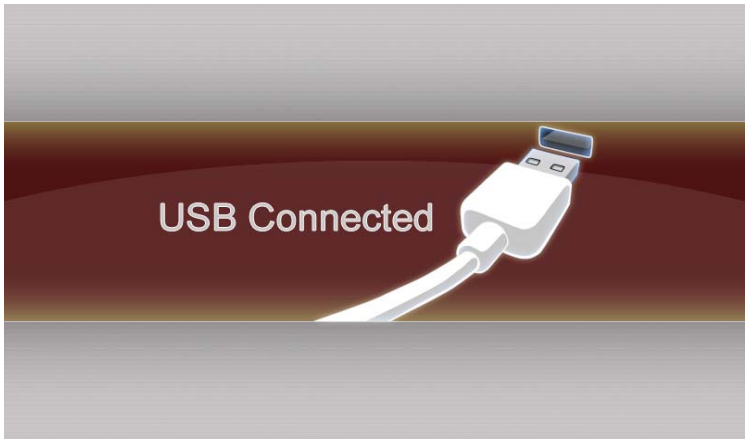

Your PC can now access the external memory card inserted in the digital picture frame and the internal memory. They will be displayed at “Devices with removable storage” under My Computer. You may now move photo and music files onto them just like you would with any external USB drive or normal hard drive.

Helpful Tips

- This device supports following memory cards: SD, MMC, MS, XD
- If there is a memory card inserted into the frame when it is connected to a PC you will be able to read and write to that card.
- For FCC certification, USB cable with a core is applied for test. And USB cable with a core is preferred for home or office use.

Product Specification

Display	Effective display	152.4(W) × 91.44(H) mm
	Dot pitch	0.0635(W) × 0.1905(H) mm
	Resolution	800 × 480 pixels
	Brightness	250 cd/m2
	Viewing angle	Horizontal: -70° ~70° (Left to Right) Vertical: -50° ~ 70° (Down to Up)
	Backlight Life	20,000 hours (Min)
Card reader	4 in 1 card reader *1 (SD, MMC, MS, XD)	
Movie	AVI / MOV Motion JPEG format File format ： AVI MOV Video codec： MJPG size <=（640 ×480） Audio codec: MP3 PCM	
Photo	Baseline JPEG, TIFF (Uncompressed RGB), GIF(GIF89a, GIF87a ,Color depth: 16 256), Resolution up to screen size (480x220)	
Music	MP3 / WMA format, sample rate support: 8000~48000, sample bits support: 8/16	
File System	Folder layer: 6 layers, total 500 PCs folders with total 9,999 files.	
Features	Movie payback Music playback Photo playback	Alarm Clock (Date and Time)

***This product specification is subject to change without notice.**

Chapter 5: Regulatory Issues & Warranty

Regulation & Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

*For USB device mode, this unit is tested and certified with a mini-B to standard-A USB cable with a EMI core.

GiiNii 90-Day Limited Warranty

Please read this Limited Warranty carefully. The limited warranty set forth below is given by GiiNii, the maker of your new digital picture frame, when purchased in the United States of America through an authorized retailer and used for non-commercial purposes. We warranty this product against manufacturing and material defects for a period of 90 days from the date of purchase. Do not return your product to the retailer for warranty claims.

1. Please maintain the Warranty Statement in a safe place along with your dated sales receipt. Please retain the original box in the event you need to make a warranty claim. Returning your product for a warranty claim in best done in the original box or an alternative package that ensure its safe return to GiiNii. Please contact our Customer Service team about the appropriate return-shipping package.
2. GiiNii Customer Service and Technical Support: 1-866-909-3550. Or, on line at: www.giinii.com
3. Parts and Labor Coverage. During the first 90 days of ownership, GiiNii will repair or replace the product, at its option, at no charge if the product is found to be defective due to material or manufacturing defects. GiiNii will provide a new product of similar or greater value at its discretion. Or, provide new or rebuilt replacement parts at its sole discretion. Replacement or repair of one part of the product does not constitute replacement or repair of other parts of the product. The customer bears the responsibility to ship the product back to GiiNii, at their cost. Pending review of the product, that shipping cost will be refunded to the customer. To make a warranty claim, you must first contact Customer Service and receive a Return Authorization Code. No repairs or replacements can be made without a Return Authorization Code. After the first 90 days of ownership, repair costs are the responsibility of the owner.
4. Excluded Items Not Covered by the Warranty:
   a Cosmetic damage or damages due to accident, misuse, abuse or negligence;
   b Commercial use of the product;
   c Damage due to improper operation, improper maintenance, improper power supply;

d Customer inability to read, understand the provided instructions on how to properly use the product;

e Modifications of any part of the product in any way;

f Damage resulting from unauthorized attempted repair of the product;

g Damage resulting from acts of nature or God.

To make a Warranty Claim please have the following items:

a Your original dated proof of purchase from an authorized retailer in the United States;

b Your original package that your product was sold in. Your warranty claim will not be honored without the original purchase receipt. If you do not have the original package, please consult with our Customer Service team to determine the best way to return your product to us. GiiNii cannot be responsible for damages incurred during return shipping; insurance is highly recommended.

c Please provide written statement (typed or printed in block letters) that describes why your product is defective. On this document, you will need to include the Return Authorization Code provided by Customer Service, as well as your Name, return address, and a daytime phone number. Return shipments to GiiNii should be insured and sent via Registered Mail with proof of delivery.

Warranty Disclaimers

GiiNii and its parent company, affiliates or subsidiaries shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Application of this warranty may vary by state; this warranty gives you specific legal rights and you may have others based on the state you live in.

Replacement Parts

If you need a replacement part for your GiiNii Digital Picture Frame, call us at 1-866-909-3550 or write to us at: customerservice@giinii.com.

Warning

Changes or modifications to this unit not expressly approved by GiiNii voids this warranty and may result in personal injury and/or property.

www.giinii.com
© 2008 GiiNii International
Printed in China